

Layer 3 Routing User's Manual

Second Edition, July 2011

www.moxa.com/product



© 2011 Moxa Inc. All rights reserved.

Layer 3 Routing User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Copyright Notice

© 2011 Moxa Inc., All rights reserved.

Trademarks

The MOXA logo is a registered trademark of Moxa Inc.
All other trademarks or registered marks in this manual belong to their respective manufacturers.

Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

Technical Support Contact Information

www.moxa.com/support

Moxa Americas

Toll-free: 1-888-669-2872
Tel: +1-714-528-6777
Fax: +1-714-528-6778

Moxa Europe

Tel: +49-89-3 70 03 99-0
Fax: +49-89-3 70 03 99-99

Moxa China (Shanghai office)

Toll-free: 800-820-5036
Tel: +86-21-5258-9955
Fax: +86-21-5258-5505

Moxa Asia-Pacific

Tel: +886-2-8919-1230
Fax: +886-2-8919-1231

Table of Contents

1. Introduction to Layer 3 Switches	1-1
The Layer 3 Switching Concept.....	1-1
Static Routing and Dynamic Routing	1-1
Static Routing	1-1
Dynamic Routing with RIP (Routing Information Protocol)	1-2
Dynamic Routing with OSPF (Open Shortest Path First).....	1-2
2. IP Interface	2-1
IP Interface Setting.....	2-1
3. Routing Protocols.....	3-1
Static Routing	3-1
Static Route Settings	3-1
Dynamic Routing with RIP (Routing Information Protocol).....	3-2
RIP Settings	3-2
Dynamic Routing with OSPF (Open Shortest Path First)	3-3
OSPF Settings.....	3-4
Gateway Redundancy.....	3-8
VRRP Settings.....	3-8
Routing Table.....	3-9
Distance Vector Multicast Routing Protocol (DVMRP)	3-9
DVMRP Settings	3-9
DVMRP Routing Entry List.....	3-10
DVMRP Neighbors List.....	3-10
DVMRP Multicast Routing Entry List	3-10
Protocol Independent Multicast, Dense Mode (PIM-DM)	3-10
PIM-DM Settings	3-10
PIM-DM Neighbors List.....	3-11
PIM-DM Multicast Routing Entry List	3-11

Introduction to Layer 3 Switches

Moxa offers Layer-3 switches that perform data switching on the Network Layer (Layer 3) of the ISO's OSI layer model. Unlike Layer-2 switching, which uses the MAC address for exchanging data, a Layer-3 switch uses the IP address to represent the destination of a data packet.

The Layer 3 Switching Concept

IP (Internet Protocol) is a protocol defined on layer 3 of the 7-layer OSI model. The IP address is used to address data packets on the Network Layer, and is not tied to the hardware of a device or PC. The IP address can be assigned by the system operator or network administrator.

Since Layer 2 switches use the MAC address to determine the destination of transmitted data packets, and Layer 3 switches use the IP address, some mechanism is needed to associate MAC addresses with IP addresses. This is done by ARP (Address Resolution Protocol), which creates a table that matches MAC addresses to IP addresses.

When a PC sends out an ARP request, which is just a broadcast packet requiring the IP address owner to send back his MAC address, two situations could occur:

- If your PC and the IP address owner are on the same subnet, the IP address owner will use a unicast packet, which contains his MAC address, to reply to your PC. Thereafter your PC will use this MAC address to transmit to the IP address owner directly.
- If your PC and the IP address owner are not on the same subnet, your PC will not receive a reply, so it will ask for the MAC address of the Layer-3 switch (gateway/ router). To transmit data packets to the IP address owner, your PC packs the data packet with the IP address, and sends the packet to the Layer-3 switch (gateway/router) using its MAC address. The Layer-3 switch (gateway/router) receives the data packet, re-packs it, and then forwards it to the next hop according to the routing rules.

Static Routing and Dynamic Routing

The Moxa Layer 3 switch supports two routing methods: static routing and dynamic routing. Dynamic routing makes use of RIP V1/V1c/V2, and OSPF. You can either choose one routing method, or combine the two methods to establish your routing table.

A routing entry includes the following items: the destination address, the next hop address (which is the next router along the path to the destination address), and a metric that represents the cost we need to pay to access a different network.

Static Routing

You can define the routes yourself by specifying what is the next hop (or router) that the Layer 3 switch forwards data for a specific subnet. The settings of the Static Route will be added to the routing table and stored in the Layer 3 switch.

Dynamic Routing with RIP (Routing Information Protocol)

RIP is a distance vector-based routing protocol that can be used to automatically build up a routing table in the Moxa Layer 3 switch.

The Moxa Layer 3 switch can efficiently update and maintain the routing table, and optimize the routing by identifying the smallest metric and most matched mask prefix.

Dynamic Routing with OSPF (Open Shortest Path First)

The Moxa Layer 3 switch also supports OSPF (open shortest path first), which uses "Link State" instead of "hop count" to determine the network route. OSPF is more complicated than RIP. However, compared to RIP, OSPF has faster network convergence and results in less network traffic. Both RIP and OSPF are usually referred to as Interior Gateway Protocols (IGP).

IP Interface

Before configuring the routing protocols, we first need to set the correct IP interfaces for the network.

IP Interface Setting

The IP Interface Setting page is used to assign the interface.

IP Interface Setting

IP Interface Entry

Interface Name

IP Address

Subnet Mask

VLAN ID

Proxy ARP Enable

IP Interface Table

All	Interface Name	IP Address	Subnet Mask	VLAN ID	Proxy ARP
<input type="checkbox"/>	IF_1	100.10.1.1	255.255.255.0	2	Disabled
<input type="checkbox"/>	IF_2	100.10.2.1	255.255.255.0	3	Disabled

Interface Name

Used to describe this interface (max. of 30 characters.)

IP Address

This option is used to specify the IP address of this interface.

Subnet Mask

This option is used to specify the subnet mask for this IP address.

VLAN ID

Setting	Description	Factory Default
ID numbers	Display all available VLAN IDs that you have set in the Virtual LAN. To establish an interface, you must first assign an available ID to this interface. If a VLAN ID is assigned twice, a warning message will appear.	None (if no VLAN ID is available)

Proxy ARP

Setting	Description	Factory Default
Enable/Disable	This option is used to enable or disable the Proxy ARP.	Disabled

There are three action buttons for setting up the **IP Interface Table**:

Add

To add a entry into the IP Interface Table

Delete

To remove the selected entries from the IP Interface Table

Modify

To modify the content of a selected entry in the IP Interface Table

NOTE The entries in the IP Interface Table will not be added to the Moxa Layer 3 switch's interface table until you click the Activate button.

Routing Protocols

Moxa Layer 3 switches support two routing methods: static routing and dynamic routing. Dynamic routing makes use of RIP V1/V1c/V2, or OSPF. You can either choose static routing only, or combine static routing and one of the dynamic routing methods to establish your routing table.

A routing entry includes the following items: the destination address, the next hop address (which is the next router along the path to the destination address), and a metric that represents the cost we need to pay to access a different network.

Moxa Layer 3 switches also support two multicast routing protocols: DVMRP and PIM-DM.

Static Routing

You can define the routes yourself by specifying what is the next hop (or router) that the Layer 3 switch forwards data for a specific subnet. The settings of the Static Route will be added to the routing table and stored in the Layer 3 switch.

Static Route Settings

The **Static Route** page is used to set up the static routing table for the Moxa Layer 3 switch.

Static Route

Static Route Entry

Destination Address

Netmask

Next Hop

Metric (1~255)

Static Routing Table

<input checked="" type="checkbox"/> All	Destination Address	Netmask	Next Hop	Metric
<input type="checkbox"/>	100.10.3.1	255.255.255.0	100.10.1.254	10
<input type="checkbox"/>	100.10.4.1	255.255.255.0	100.10.2.254	20

Static Route Entry

Destination Address

You can specify the destination's IP address.

Netmask

This option is used to specify the subnet mask for this IP address.

Next Hop

This option is used to specify the next router along the path to the destination.

Metric

This option is a value assigned to an IP route for a particular network interface. The value identifies the cost associated with using that route to access the neighboring network.

NOTE After inputting all of the information for a static routing configuration, click the **Add** button to add it to the static routing table.

Static Routing Table

There are two action buttons for setting up the **Static Routing Table**:

Delete

To remove the selected entries from the Static Routing Table

Modify

To modify the contents of a selected entry in the Static Routing Table

NOTE The entries in the Static Routing Table will not be added to the Moxa Layer 3 switch's routing table until you click the Activate button.

Dynamic Routing with RIP (Routing Information Protocol)

RIP is a distance vector-based routing protocol that can be used to automatically build up a routing table in the Moxa Layer 3 switch. The Moxa Layer 3 switch can efficiently update and maintain the routing table, and optimize the routing by identifying the smallest metric and most matched mask prefix.

RIP Settings

RIP is a distance-vector routing protocol that employs the hop count as a routing metric. RIP prevents routing loops by implementing a limit on the number of hops allowed in a path from the source to a destination. The RIP page is used to set up the RIP parameters.

RIP Setting

RIP Enable
Choose if RIP will be enabled

RIP Version
RIP Send Version Choose
 V1
 V2
 V1 Compatible

RIP Distribution
Redistributed
 Connected
 Static
 OSPF

RIP Enable Table

Interface Name	IP	VID	Enable
IF_1	100.10.1.1	2	<input type="checkbox"/>
IF_2	100.10.2.1	3	<input type="checkbox"/>

Activate

RIP Enable

Setting	Description	Factory Default
Enable/Disable	This option is used to enable or disable the RIP function globally.	Disabled

RIP Version

You can specify which version the RIP should follow. You can also select V1 Compatibility to make sure the RIP packet of Version 1 can be received as well.

RIP Distribution

Setting	Description	Factory Default
Connected	The entries that are learned from the directly connected interfaces will be re-distributed if this option is enabled.	Unchecked (disabled)
Static	The entries that are set in a static route will be re-distributed if this option is enabled.	Unchecked (disabled)
OSPF	The entries that are learned from the OSPF will be re-distributed if this option is enabled.	Unchecked (disabled)

RIP Enable Table

This is a table showing the entries learned from RIP.

NOTE The RIP settings will not function until you click the Activate button.

Dynamic Routing with OSPF (Open Shortest Path First)

OSPF (Open Shortest Path First) is a dynamic routing protocol for use in Internet Protocol (IP) networks. Specifically, it is a link-state routing protocol and falls into the group of interior gateway protocols, operating within a single autonomous system. As a link-state routing protocol, OSPF establishes and maintains neighbor relationships in order to exchange routing updates with other routers. The neighbor relationship table is called an adjacency database in OSPF. OSPF forms neighbor relationships only with the routers directly connected to it. In order to form a neighbor relationship between two routers, the interfaces used to form the relationship must be in the same area. An interface can only belong to a single area. With OSPF enabled, the Moxa Layer 3 switch is able to exchange routing information with other L3 switches or routers more efficiently in a large system. The OSPF Settings page is used to set up OSPF configurations.

OSPF Settings

OSPF Global Settings

OSPF State: (dropdown)

OSPF Router ID:

Current Router ID:

Redistribute: Connected Static route RIP

Each L3 switch/router has an OSPF router ID, customarily written in the dotted decimal format (e.g., 1.2.3.4) of an IP address. This ID must be established in every OSPF instance. If not explicitly configured, the default ID (0.0.0.0) will be regarded as the router ID. Since the router ID is an IP address, it does not have to be a part of any routable subnet in the network.

OSPF State, OSPF Router ID, Current Router ID, Redistribute

Setting	Description	Factory Default
OSPF State	Select the option to enable/disable the OSPF Function.	Disable
OSPF Router ID	Set the L3 switch’s Router ID.	0.0.0.0
Current Router ID	Show the current L3 switch’s Router ID.	0.0.0.0
Redistribute	Redistribute routing information to other protocols	Connected

OSPF Area Settings

OSPF Area Settings

OSPF Area Entry

Area ID:

Area Type: (dropdown)

Metric: (0 ~ 65535)

OSPF Area Table

<input type="checkbox"/> All	Area ID	Area Type	Metric
<input type="button" value="Activate"/>			

An OSPF domain is divided into areas that are labeled with 32-bit area identifiers which are commonly written in the dot-decimal notation of an IPv4 address. Areas are used to divide a large network into smaller network areas. They are logical groupings of hosts and networks, including their routers having interfaces connected to any of the included networks. Each area maintains a separate link state database whose information may be summarized towards the rest of the network by the connecting router. Thus, the topology of an area is unknown outside of the area. This reduces the amount of routing traffic between parts of an autonomous system.

OSPF Area Entry

Area ID, Area Type, Metric

Setting	Description	Factory Default
Area ID	Define the areas that this L3 switch/router connects to.	0.0.0.0
Area Type	Define the area type, Stub Area or NSSA.	Normal
Metric	Define the metric value.	0

OSPF Area Table

Shows the current OSPF area table in the L3 switch/router.

OSPF Interface Settings

OSPF Interface Settings
 OSPF Interface Setting Entry

Interface Name: LAN_A
 Area ID: 10.0.1.1
 Router Priority: 1 (0 ~ 255)
 Hello Interval: 10 (1 ~ 65535)
 Dead Interval: 40 (1 ~ 65535)
 Auth Type: None
 Auth Key: (up to 8 characters)
 MD5 Key ID: 1 (1 ~ 255)
 Metric: 1 (1 ~ 65535)

Buttons: Add, Delete, Modify

OSPF Interface Table

All	Interface Name	IP Address	Area ID	State	Priority	Hello	Dead	Auth Type	Auth Key	MD5 Key ID	Metric
Activate											

Before using OSPF, we have to assign an interface for each area. Also the detailed information of the interface can be defined in this section. See the details in the following descriptions:

OSPF Interface Setting Entry

Configuration details

Setting	Description	Factory Default
Interface Name	Define the interface name.	N/A
Area ID	Define the Area ID.	N/A
Router Priority	Define the L3 switch/router’s priority.	1
Hello Interval	Hello packets are packets that an OSPF process sends to its OSPF neighbors to maintain connectivity with those neighbors. The hello packets are sent at a configurable interval (in seconds). The value of all hello intervals must be the same within a network.	10
Dead Interval	The dead interval is also a configurable interval (in seconds), and defaults to four times the value of the hello interval.	40
Auth Type	OSPF authentication allows the flexibility to authenticate OSPF neighbors. Users can enable authentication to exchange routing update information in a secure manner. OSPF authentication can either be none, simple, or MD5. However, authentication is not necessary to be set. If it is set, all L3 switches / routers on the same segment must have the same password and authentication method.	None

Auth Key	Authentication key means the clear-text password when using "Simple" method of the authentication type or MD5 encrypted password when using MD5 of authentication type.	N/A
MD5 Key ID	MD5 authentication provides higher security than plain text authentication. This method uses the MD5 to calculate a hash value from the contents of the OSPF packet and the authentication key. This hash value is transmitted in the packet, along with a key ID.	1
Metric	Manually set Metric / Cost of OSPF.	1


OSPF Interface Table

Shows the current OSPF interface table in a list.

Area ID, Area Type, Metric

Setting	Description	Factory Default
Area ID	Define the areas that this L3 switch/router connects to.	0.0.0.0
Area Type	Define the area type, Stub Area or NSSA.	Normal
Metric	Define the metric value.	0

OSPF Virtual Link Settings

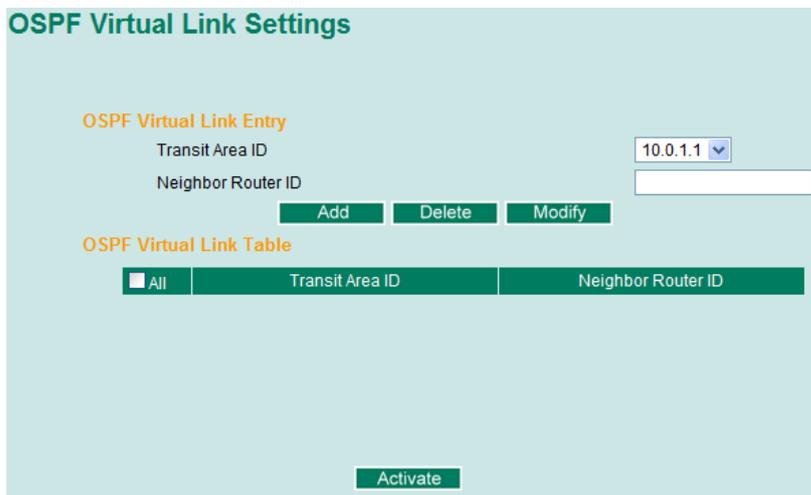

All areas in an OSPF autonomous system must be physically connected to the backbone area (Area 0.0.0.0). However, this is impossible in some cases. For those cases, users can create a virtual link to connect to the backbone through a non-backbone area and also use virtual links to connect two parts of a partitioned backbone through a non-backbone area.

OSPF Virtual Link Entry

Configuration details

Setting	Description	Factory Default
Transit Area ID	Define the areas that this L3 switch/router connects to.	N/A
Neighbor Router ID	Define the neighbor L3 switch/route's ID.	N/A

OSPF Virtual Link Table

Shows the current OSPF virtual link table.

OSPF Area Aggregation Settings

OSPF Area Aggregation Settings

OSPF Aggregation Entry

Area ID: 10.0.1.1

Network Address:

Network Mask:

OSPF Aggregation Table

All	Area ID	Network Address	Network Mask
-----	---------	-----------------	--------------

Each of OSPF areas which consist of a set of interconnected subnets and traffic across areas is handled by routers attached to two or more areas, known as Area Border Routers (ABRs). With OSPF aggregation function, users can combine groups of routes with common addresses into a single routing table entry. The function is used to reduce the size of routing tables.

OSPF Aggregation Entry

Configuration details

Setting	Description	Factory Default
Area ID	Select the Area ID that you want to configure.	N/A
Network Address	Fill in the network address in the area.	N/A
Network Mask	Fill in the network mask.	N/A

OSPF Aggregation Table

Shows the current OSPF aggregation table.

OSPF Neighbor Table

OSPF Neighbor Table

Page 1/1

Index	Neighbor ID	Priority	State	Address	Interface
-------	-------------	----------	-------	---------	-----------

Shows the current OSPF neighbor table.

OSPF Database Table

OSPF Database Table

Page 1/1

Index	Area ID	Database Type	Link State ID	Advertised Router	Route
-------	---------	---------------	---------------	-------------------	-------

Shows the current OSPF database table.

Gateway Redundancy

VRRP Settings

VRRP Settings

VRRP Enable
 Enable

VRRP Interface Setting Entry
 Enable

Virtual IP

Virtual Router ID (1~255)

Priority (1~254)

Preemption Mode Enable

Modify

VRRP Interface Table

	Interface Name	IP Address	VLAN ID	VRRP Enable	VRRP Status	Virtual IP	Virtual Router ID	Priority	Preemption Mode
<input type="checkbox"/>	LAN_A	10.0.1.1	10	Disabled	Init	0.0.0.0	0	100	Enabled
<input type="checkbox"/>	LAN_B	10.0.2.1	20	Disabled	Init	0.0.0.0	0	100	Enabled

Activate

The Virtual Router Redundancy Protocol (VRRP) feature can solve the static configuration problem. VRRP enables a group of routers to form a single virtual router with a virtual IP address. The LAN clients can then be configured with the virtual router’s virtual IP address as their default gateway. The virtual router is the combination of a group of routers, and also known as a VRRP group.

Enable


Setting	Description	Factory Default
Enable	Checkmark the checkbox to enable the VRRP.	N/A

VRRP Interface Setting Entry

Setting	Description	Factory Default
Enable	Determines to enable the VRRP entry or not.	Disabled
Virtual IP	L3 switches / routers in the same VRRP group must have the identical virtual IP address like VRRP ID. This virtual IP address must belong to the same address range as the real IP address of the interface.	0.0.0.0
Virtual Router ID	Virtual Router ID is used to assign a VRRP group. The L3 switches / routers, which operate as master / backup, should have the same ID. Moxa L3 switches / routers support one virtual router ID for each interface. The usable range of ID is 1 to 255.	0
Priority	Determines priority in a VRRP group. The priority value range is 1 to 255 and the 255 is the highest priority. If several L3 switches / routers have the same priority, the router with higher IP address has the higher priority. The usable range is “1 to 255”.	100
Preemption Mode	Determines whether a backup L3 switch / router will take the authority of master or not.	Enabled

Routing Table

The **Routing Table** page shows all routing entries used by the Moxa Layer 3 switch.

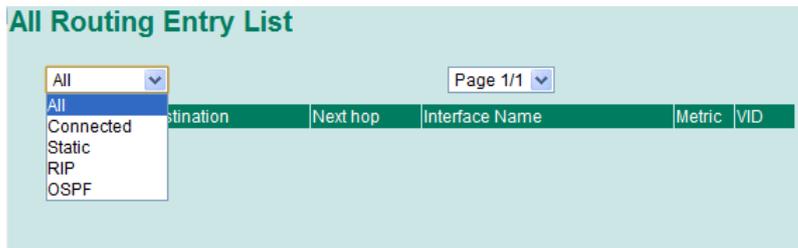

All Routing Entry List


Setting	Description	Factory Default
All	Show all routing rules	N/A
Connected	Show connected routing rules	N/A
Static	Show static routing rules	N/A
RIP	Show RIP exchanged routing rules	N/A
OSPF	Show OSPF exchanged routing rules	N/A

Distance Vector Multicast Routing Protocol (DVMRP)

Distance Vector Multicast Routing Protocol (DVMRP) is used to build multicast delivery trees on a network. When a layer 3 switch receives a multicast packet, DVMRP will provide a routing table for the relevant multicast group, and include distance information on the number of devices between the router and the packet destination. The multicast packet will then be forwarded through the Layer 3 switch interface specified in the multicast routing table.

DVMRP Settings

The **DVMRP** page is used to set up the DVMRP table for Moxa Layer 3 switches.

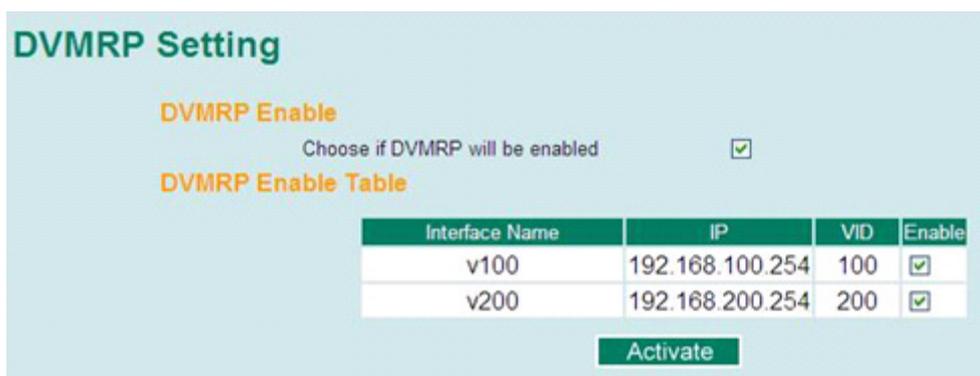

DVMRP Enable

Enable or disable DVMRP globally.

NOTE Two different multicast routing protocols can NOT both be enabled on the same Moxa Layer 3 switch. Only either DVMRP or PIM-DM can be enabled, not both.

DVMRP Enable Table

Enable or Disable the DVMRP by selected interface.

DVMRP Routing Entry List

DVMRP Routing Entry List

Page 1/1

Index	Type	Destination	Next hop	Interface Name	VID	Cost	Expire Time
-------	------	-------------	----------	----------------	-----	------	-------------

Shows the current DVMRP Routing Entry List

DVMRP Neighbors List

DVMRP Neighbors List

Page 1/1

Index	Neighbor IP	Interface Name	VID	Expire Time	Hold Time
-------	-------------	----------------	-----	-------------	-----------

Shows the current DVMRP neighbors list

DVMRP Multicast Routing Entry List

DVMRP Multicast Routing Entry List

Page 1/1

Index	Multicast Group	Source	Upstream Neighbor	Interface Name	VID	Expire Time	Left Time	Downstream interface VID
-------	-----------------	--------	-------------------	----------------	-----	-------------	-----------	--------------------------

Shows the current DVMRP Multicast Routing Entry List

Protocol Independent Multicast, Dense Mode (PIM-DM)

Protocol Independent Multicast (PIM) is a method of forwarding traffic to multicast groups over the network using any pre-existing unicast routing protocol, such as RIP or OSPF, set on routers within a multicast network. PIM Dense Mode (PIM-DM) protocol will flood multicast traffic on the network and revise the multicast routing table based on the responses.

PIM-DM Settings

The **PIM-DM** page is used to set up the PIM-DM table for Moxa Layer 3 switch.

PIM-DM Setting

PIM-DM Enable
Choose if PIM-DM will be enabled

PIM-DM Enable Table

Interface Name	IP	VID	Enable
v100	192.168.100.254	100	<input checked="" type="checkbox"/>
v200	192.168.200.254	200	<input checked="" type="checkbox"/>

Activate

PIM-DM Enable

Enable or Disable PIM-DM protocol globally.

NOTE Two different multicast routing protocols can NOT both be enabled on the same Moxa Layer 3 switch. Only either DVMRP or PIM-DM can be enabled, not both.

PIM-DM Enable Table

Enable or Disable the PIM-DM by selected interface.

PIM-DM Neighbors List

PIM-DM Neighbors List

Page 1/1

Index	Neighbor IP	Interface Name	VID	Left Time
-------	-------------	----------------	-----	-----------

Shows the current PIM-DM Neighbors List

PIM-DM Multicast Routing Entry List

PIM-DM Multicast Routing Entry List

Page 1/1

Index	Multicast Group	Source	Upstream Neighbor	Incoming Interface Name	VID	Left Time	Downstream interface VID
-------	-----------------	--------	-------------------	-------------------------	-----	-----------	--------------------------

Shows the current PIM-DM Multicast Routing Entry List